

GERM-BUSTER

USER MANUAL



Congratulations! You are now the proud owner of O3 Bin, before using the bin read these instructions carefully.

Important Safety Precautions

- Before operating this appliance for the first time, read all instructions. Failure to observe the instructions and safety notes may result in hazardous conditions.
- After unpacking the appliance, check it for damage. If in doubt, do not use it and contact your dealer.
- Keep the packaging materials (cardboard, plastic bags etc.) out of reach of children.
- This appliance is designed for household use only.
- Do not use near water, heat source or outdoor.
- Do not use appliance for other than intended use.
- Place unit on secure, stable work area to prevent unit from falling and possibly personal injury and damage to the unit.
- In the case of a fault or malfunction occurring, has been dropped, damaged, left outdoor, switch the appliance off; do not attempt to repair it yourself.
- Do not handle plug with wet hands.
- Do not use with damage cable or plug.
- Do not unplug by pulling on cable. To unplug, grasp the plug, not the cable.
- The unit must be connected to a supply voltage corresponding to the electrical rating.
- Unplug from outlet before cleaning. Never immerse the item in water. Only clean the appliance using a damp cloth.
- Never use chemicals, steel wool or abrasive agents to clean the exterior of the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is only to be used with the power supply unit provided with the appliance

Features:

UV kills most micro-organisms and bacteria (includes: Escherichia coli O157 CICC 21530, Salmonella CMCC 50115, MRSA ATCC 33591 and MRSA ATCC 6538)
Ozone generated by oxygen and UV light tube
Long lifespan of UV lamp: 20,000 hrs
Non-slip base
Safe for humans
Hydraulic Lid Closure System: smooth and quiet

Materials: Stainless Steel and Polypropylene (PP)

Capacity: 30 Litres
Net Weight: 6 kg
Dimensions: 39L x 34W x 63H cm (external)
26L x 29W x 55H cm (internal)

Capacity: 18 Litres
Net Weight: 5 kg
Dimensions: 39L x 34W x 48H cm (external)
26L x 29W x 42H cm (internal)

Power-
AC-DC Adaptor: Input:100-240v~50-60Hz 0.32A
MAX Output:9V ---- 650mA
Rechargeable batteries: NI-MH2100mAh 6.0V

LED indicator located at the back of the bin:
GREEN - fully charged
GREEN, FLASHING - charging
RED - battery low

A/M button
A - Automatic
Sterilization and deodorization process-3 times per hour
(10 minutes "ON" 10 minutes "OFF")
M - Manual
Sterilization and deodorization process-10minutes everytime when switch located on the top lid pressed once (blue lights on)

Pause automatically when lid is open, process resumes when closed


UV light tube - for sterilization and deodorization

Electric Fan - helps releasing Ozone during deodorization


Buzzer - "beeps" for 1 minute when the lid is not closed properly or left open for 30 seconds
Sterilizing unit will cease operation
Main ON/OFF Switch - always ON

Reset button - default to original factory settings


www.o3bin.com/warranty

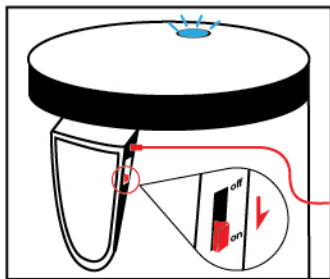


Connect the cable
Plug in to charge (8-10hours)
Turn on Germ-buster using
the ON/OFF switch

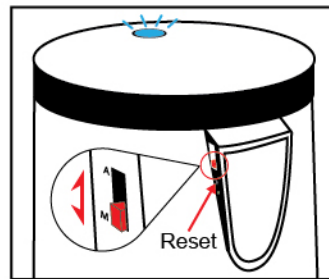


A/M switch
A - Automatic
process 3 times per hour
(10 minutes "ON" 10 minutes "OFF")
M- Manual
process 10mins everytime when
switch on lid pressed, then back to
standing by mode
Reset button: default to factory
settings
Note: during the A - automatic mode,
press the switch on lid anytime to
process 10mins

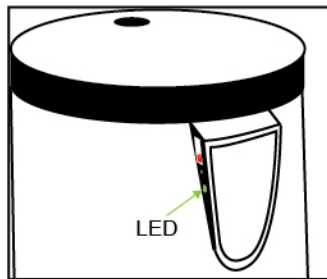


LED indicator at battery case
GREEN - fully charged
GREEN FLASHING - charging
RED BLINKING - battery low
Rechargeable batteries: last
up to 10 hours in A-mode

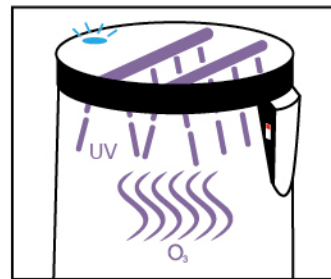

LED indicator lights up while
processing
UV lamp lights up and release ozone

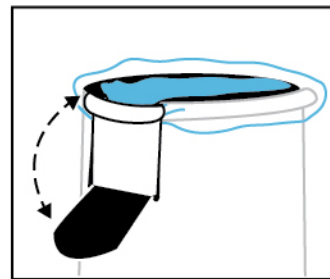

Open the bag latch of the Inside lid
Wrap bag tightly around rim of liner
and twist excess behind bag latch
Snap to close bag latch, trapping
excess trash bag

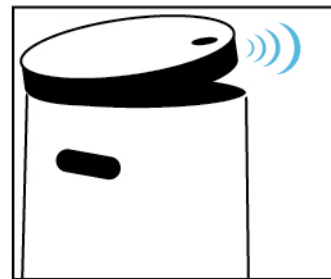

Buzzer - "beeps" for 1 minute when
the lid is not closed properly or left
open for 30 seconds
Sterilizing unit will cease operation